


 
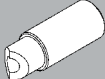













< Table of combinations of replacement parts >


Blind Rivet Dia.	AR - 011MX	AR - 011HX			
	Nosepiece	Nosepiece (Hole dia.)	Ultra Jaws	Jaw Case Head	Jaw Pusher
2.4mm (3/32")	2.4 	2.4 (1.8 mm) 	"M" 	"M" 	"M" 
3.2mm (1/8")	3.2 	3.2 (2.3 mm) 			
4.0mm (5/32")	4.0 	4.0 (2.9 mm) 			
4.8mm (3/16")	4.8 	4.8 (3.3 mm) 			
6.4mm (1/4")		6.4 (4.3 mm) 	"H" 	"H" 	"H" 

 Shaded areas indicate parts which are installed in the tool as standard accessories.

5 Please change either straight joint or rotary joint by using spanner or similar tools which are suitable for your working environment.


< Table of combinations of replacement parts >

Type of joint	Fitting to A	Fitting to B
Straight joint	Nipple Unit	Change Plug Unit
Rotary joint	End Plug Unit	Rotary Joint Unit


 Shaded areas indicate parts which are installed in the tool as standard accessories.

Screw size of the air intake of straight joint or rotary joint is parallel pipe thread G1/4.

Parts of straight joint are option. (Refer to page 13.)

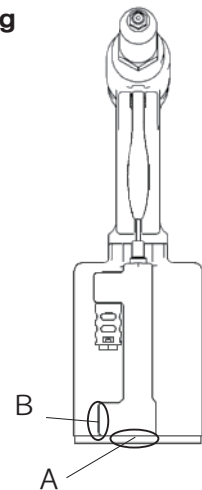

●PARTS TABLE OF AR-011 HX

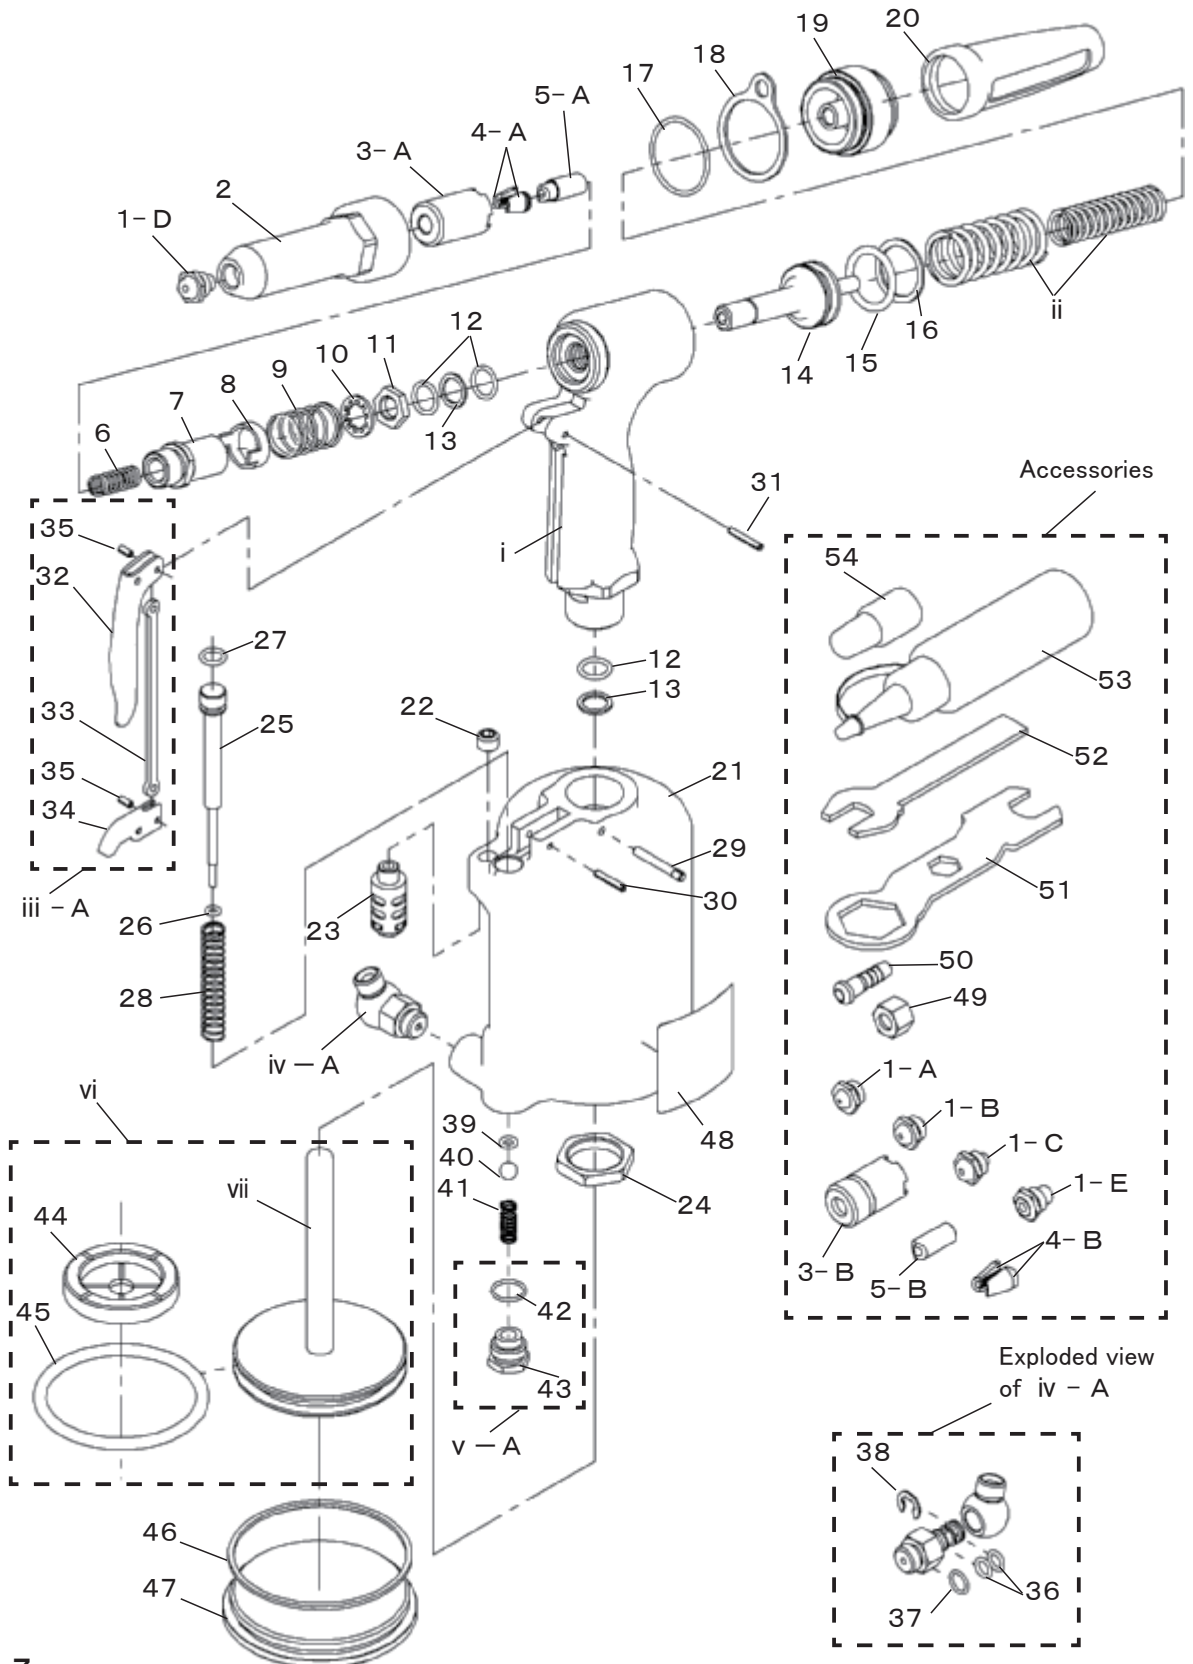

Index No.	Part Name	Code No.	Material	Index No.	Part Name	Code No.	Material
①-A	Nosepiece 'H' 2.4	10213	Steel	28	Valve Pusher Spring	10453	Steel
①-B	Nosepiece 'H' 3.2	10214	Steel	29	Slotted Pin 4 × 31	14154	Steel
①-C	Nosepiece 'H' 4.0	10215	Steel	30	Spring Pin 3 × 18	10145	Steel
①-D	Nosepiece 'H' 4.8	14350	Steel	31	Spring Pin 3 × 20	10251	Steel
①-E	Nosepiece 'H' 6.4	10226	Steel	iii - A	Trigger (Long) Unit 'H'	20512	Steel
2	Frame Head	10191	Steel	32	Trigger (Long)	13126	Steel
③-A	Jaw Case Head 'M'	14378	Steel	33	Trigger Connector Rod	10202	Steel
③-B	Jaw Case Head 'H'	10447	Steel	34	Trigger Lever	10119	Steel
④-A	Ultra Jaws (Pair) 'M'	10281	Steel	35	Spring Pin 3 × 7.2	23595	Steel
④-B	Ultra Jaws (Pair) 'H'	10493	Steel	iv - A	Rotary Joint Unit	42502	②
⑤-A	Jaw Pusher 'M'	10209	Steel	③⑥	O-ring P-7	10149	Rubber
⑤-B	Jaw Pusher 'H'	10224	Steel	37	O-ring S-10	10151	Rubber
⑥	Jaw Pusher Spring	10210	Steel	38	Retaining ring E-7	10285	Steel
⑦	Jaw Case	10429	Steel	③⑨	Valve Packing	66064	Rubber
8	Jaw Case Collar	10448	Steel	40	Valve (Steel Ball 8.0)	10247	Steel
9	Collar Spring	10449	Steel	41	Valve Spring	10444	Steel
⑩	Lock Washer	10148	Steel	v - A	End Plug Unit	65180	③
11	Jaw Case Lock Nut	10113	Steel	42	O-ring S-14	10152	Rubber
i	Frame Unit	65413	①	43	End Plug	65178	Brass
⑫	O-ring P-12	10128	Rubber	vi	Air Piston Unit	65416	②
⑬	B-ring P-12	10129	Plastic	vii	Air Piston Rod Unit	65417	④
14	Oil Piston	10195	Steel	④④	Bumper (Rubber Cushion)	29736	Rubber
⑮	O-ring P-24	10207	Rubber	④⑤	O-ring P-70	10212	Rubber
⑯	B-ring P-24	10208	Plastic	④⑥	O-ring G-80	10211	Rubber
ii	Return Spring	14139	Steel	47	Cylinder Cap	10059	Aluminum
17	O-ring S-28	10221	Rubber	48	Warning Label	61075	⑤
⑰	Hanger Clip	10192	Steel	49	Air Hose Joint Nut 1/4	10139	Brass
19	Frame Cap	65420	Aluminum	50	Air Hose Joint 1/4	10140	Brass
⑳	Safety Cap	42505	Rubber	51	Spanner 'A'	10217	Steel
21	Air Cylinder	65411	④	52	Spanner 'B'	10218	Steel
22	Plug	14359	Steel	⑤③	Hydraulic Oil	10012	Prastic
⑳③	Silencer	14355	Plastic	⑤④	Lubricant Oil (in a bottle)	64088	Prastic
24	Frame Lock Nut	10112	Steel	Option			
25	Valve Pusher	65929	Brass	iii - B	Trigger (Short) Unit 'H'	14538	Steel
⑳⑥	O-ring P-4	10454	Rubber	iv - B	Change Plug Unit	42509	⑥
⑳⑦	O-ring P-9	10219	Rubber	v - B	Nipple Unit	65191	③

※ Parts with circled Index No. are consumable parts. They should be replaced periodically.

※ Index No. i (Frame Unit) includes Index No.12 and 13 (O-ring P-12 and B-ring P-12).

※ Index No.21 (Air Cylinder) includes Index No.22 (Plug).

※ Unit parts materials

- ① Aluminum, Rubber, Plastic ② Aluminum, Rubber, Steel ③ Brass, Rubber
 ④ Aluminum, Steel ⑤ Paper, Plastic ⑥ Rubber, Plastic